



AWESOME ENTERTAINMENT

614.224.9568

Popcorn Machine Instructions



Important Precautions:

- Machine needs to be plugged into a 110-volt dedicated circuit to operate properly.
- Always have the kettle motor switch OFF when not popping corn.
- The kettle will get very hot! USE CAUTION ALWAYS.
- Water must NEVER be put on the popping KETTLE!
- Never lift machine from yellow top section. Machine weighs 75 pounds and it must be lifted from the base by at least 2 persons. Damage to machine will be billed at replacement cost.

Operating Machine:

- Plug in machine.
- Push kettle lid up to the top of cabinet.
- Turn HEAT and LIGHT switch to ON (Wait 3-4 minutes for kettle to heat up).
- When ready to add oil and popcorn, turn KETTLE MOTOR switch ON to start the motor.
- Open the oil pouch and pour into the kettle.
- Immediately add the popcorn. (DO NOT OVERFILL: only pop one popcorn pack at a time.)
- Pull the kettle lid downward from the top of the cabinet to cover the kettle. DO NOT FORGET TO COVER THE KETTLE OR THE OIL AND POPCORN WILL IMMEDIATELY SPRAY OUT ALL OVER THE SIDES OF THE MACHINE.
- While the corn is popping open the plexiglass doors slightly to prevent fogging.
- Popcorn will pop quickly, and when the popping ceases, TURN BOTH THE KETTLE HEAT AND MOTOR SWITCH OFF.
- Lift the kettle lid until it attaches to the magnet on top of machine. Dump popped corn by releasing the kettle, rotating the black handle clockwise and pulling **downward**.
- Put the kettle back in place using the black handle to hook the kettle to the holding bolt. USE CAUTION - THE KETTLE IS VERY HOT!
- Repeat steps 2-12 for additional batches. Each dual pack of popcorn and oil makes 10 2-cup servings.
- If you are making several batches continuously you do not have to wait for machine to reheat. It will already be pre-heated.
- Remember to turn HEATING LIGHT SWITCH to ON in order to keep your popcorn warm.

See other side for how to clean the machine





AWESOME ENTERTAINMENT

614.224.9568

Popcorn Machine Cleaning



1. **Cool the machine.** After use, wait until all of the components of the machine have cooled to a temperature that is safe for you to clean.
2. **The Kettle.** Empty the kettle of any remaining seeds/popcorn. Use a soft cloth to wipe the sides and the lip of the kettle. If needed, dampen the cloth but **NEVER USE SOAP or SUBMERGE** the kettle in water.
3. **Inner Glass.** Wipe the glass with a dry cloth. This removes the top layer of grease. Then, with a hot damp cloth, wipe the glass again, Repeat with a hot cloth until all grease is removed from inside glass.
4. **Outer Glass.** Use a windex cleaner for the outer glass and the cart of the popcorn machine.
5. **The Tray.** Empty the catch tray and wipe it out with a damp cloth. DO NOT submerge in water.
6. **Drying.** Dry the machine **completely**. Make sure each part of the machine is dry to prevent mildew and rusting.

ALL EQUIPMENT MUST BE CLEANED AND READY BY PICK UP TIME

\$25 FEE FOR BASIC CLEANING

\$50 FEE FOR ROUGH CLEANING

DAMAGE OR MISSING CONCESSION EQUIPMENT FEE:

\$300-\$500